 



## About Batteries / 電池說明 / 电池说明


### 1. Battery Model / 電池型號 / 电池型号

|                                  |   |  |
|----------------------------------|---|--|
| CR2450<br>(Standard /<br>標準/标准)  |  | Panasonic 3V 600mAh<br>Lithium Coin <u>Unchargeable</u><br>Battery type<br>一次性電池 / 一次性电池 |
| BR2450A<br>(Optional /<br>選購/选购) |  | Panasonic 3V 550mAh<br>Lithium Coin <u>Unchargeable</u><br>Battery type<br>一次性電池 / 一次性电池 |


\*BR2450A for Aluminum bezel & Wide temperature / BR2450A為前鋁+寬溫電池/ BR2450A为前铝+宽温电池

### 2. When the low battery message appears, please install the replacement battery. 當低電量訊息顯示時,請安裝替代電池 / 当低电量讯息显示时,请安装替代电池


English Version

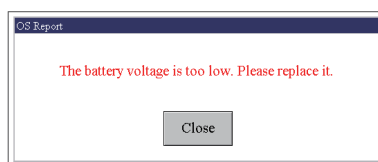

繁體中

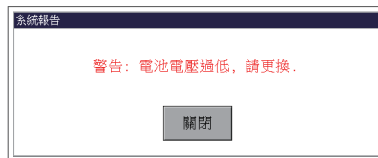

簡中

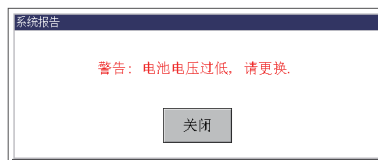


### ⚠ CAUTION / 注意 / 注意


- Keep away from explosion, fire, or chemical hazard.
- Follow the procedures step by step to install the battery correctly and safely.
- Before installing the replacement battery, disconnect power from the terminal.
- This Installation may be affecting the warranty. If you have any questions about this installation, please contact us.

- 請遠離爆炸、火災或化學危險
- 請依照步驟進行正確及安全的電池安裝
- 安裝替代電池之前請務必切斷產品電源
- 此項目操作可能會影響產品保固，如有問題請跟本公司聯絡詢問

- 请远离爆炸、火灾或化学危险
- 请依照步骤进行正确及安全的电池安装
- 安装替代电池之前请务必切断产品电源
- 此项目操作可能会影响产品保固，如有问题请跟本公司联络询问

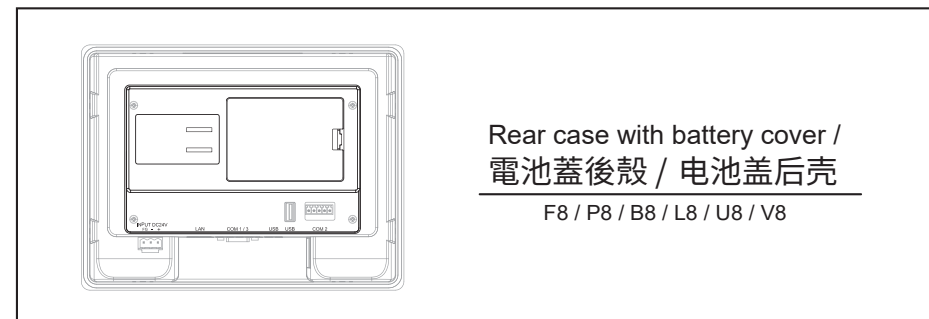


1.

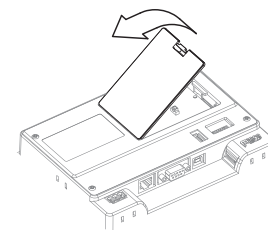


Open the battery cover. /  
掀開電池蓋 / 掀开电池盖

2.

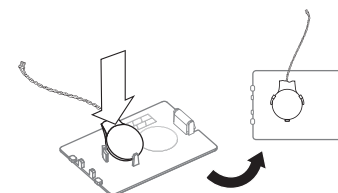


Place the battery in the correct direction  
and fix the external battery to the inside of  
the back cover, as shown. /  
將外接電池依圖示方向固定於電池蓋  
背後位置 / 将外接电池依图示方向  
固定于电池盖背后位置

3.

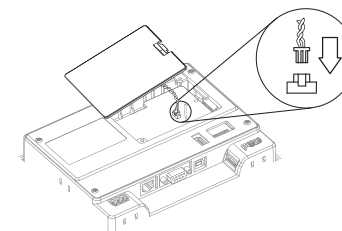


Plug in the JST PH connector of external  
battery into the socket. /  
將外接電池接頭插入電池插座 /  
将外接电池接头插入电池插座

4.

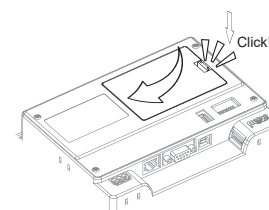


Replace the battery cover and press it  
down until it clicks into place. /  
蓋回電池蓋並確認固定即完成 /  
盖回电池盖并确认固定即完成

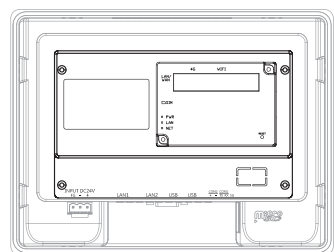

With ADP Board Type /  
附帶ADP板型式後殼 /  
附帶ADP板型式后壳


F4 / P4 / B4 / L4 / U4 / V4

1.

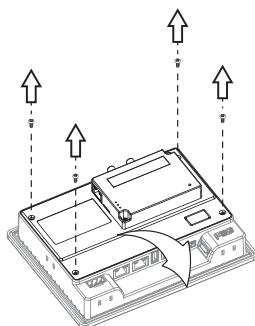


Loosen all the screws from the back cover  
and lift the back cover off. /  
請鬆開後蓋螺絲並將後蓋翻面 /  
请松开后盖螺丝并将后盖翻面

2.

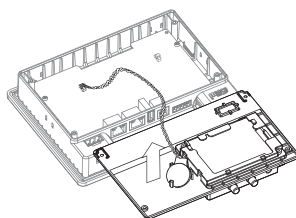


Remove the primary battery from inside of  
the back cover. /  
移除後蓋反面的固定電池座上的原電池 /  
移除后盖反面的固定电池座上的原电池

3.

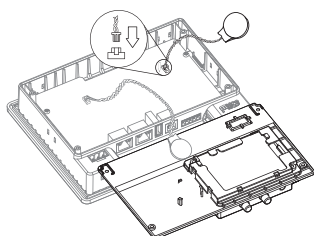


Plug in the JST PH connector of the  
replacement battery into the socket to the right. /  
將替代外接電池接頭插入右邊電池插座 /  
将替代外接电池接头插入右边电池插座

4.

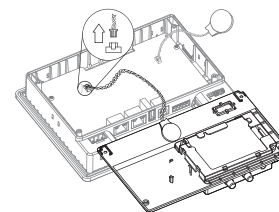


Unplug the JST PH connector the of primary  
battery on the left socket. /  
將主板左邊的原電池插座拔出 /  
将主板左边的原电池插座拔出

5.

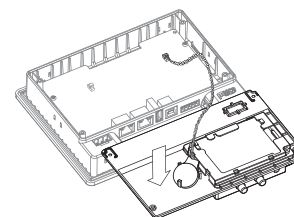


Place the battery in the correct direction  
and fix the replacement battery on the inside  
of the back cover, as shown. /  
將外接電池依圖示方向固定於後蓋背後位置 /  
将外接电池依图示方向固定于后盖背后位置

6.

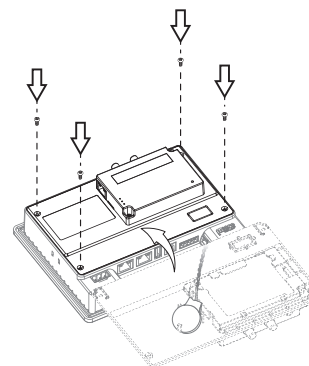


Replace the back rear and Fasten  
the screws to fix. /  
蓋回後蓋並鎖回螺絲即完成 /  
盖回后盖并锁回螺丝即完成

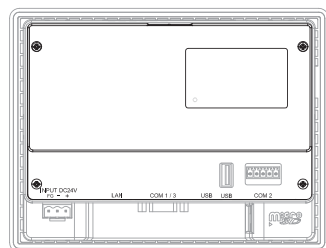


PT2070-W\_T rear case /  
PT2070-W\_T系列 / 系列  
PT2070 - W\_T\_\_F1

1.

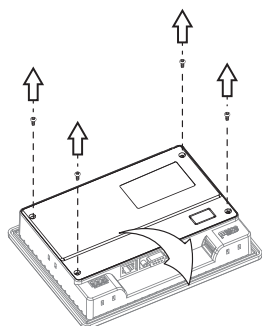


Loosen all the screws from the back cover  
and lift the back cover off. /  
請鬆開後蓋螺絲並將後蓋翻面 /  
请松开后盖螺丝并将后盖翻面

2.

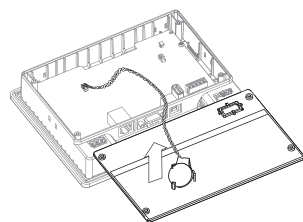


Remove the primary battery from inside of  
the back cover. /  
移除後蓋反面的固定電池座上的原電池 /  
移除后盖反面的固定电池座上的原电池

3.

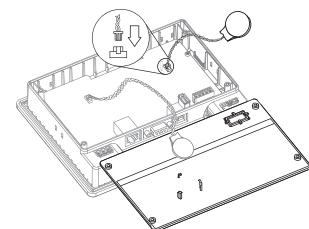


Plug in the JST PH connector of the  
replacement battery into the socket to the right. /  
將替代外接電池接頭插入右邊電池插座 /  
将替代外接电池接头插入右边电池插座

4.

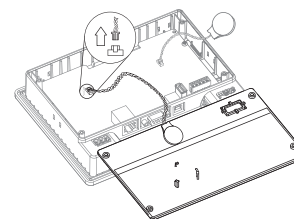


Unplug the JST PH connector the of primary  
battery on the left socket. /  
將主板左邊的原電池插座拔出 /  
将主板左边的原电池插座拔出

5.

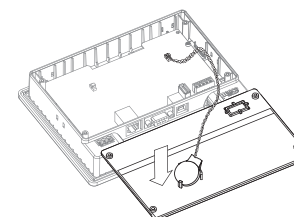


Place the battery in the correct direction  
and fix the replacement battery on the inside  
of the back cover, as shown. /  
將外接電池依圖示方向固定於後蓋背後位置 /  
将外接电池依图示方向固定于后盖背后位置

6.

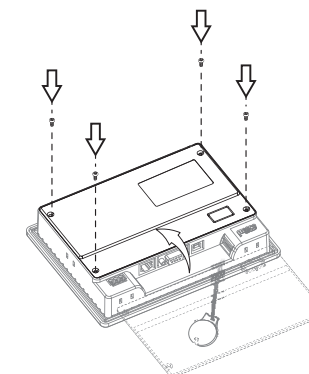


Replace the back rear and fasten  
the screws to fix. /  
蓋回後蓋並鎖回螺絲即完成 /  
盖回后盖并锁回螺丝即完成

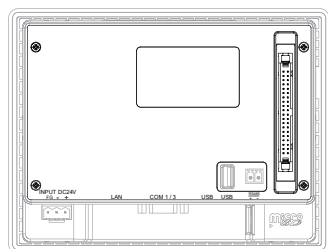


Rear case for extension key type /  
牛角後殼 / 牛角后壳  
PT2070 - NYT / NXT / WYT / WXT

1.

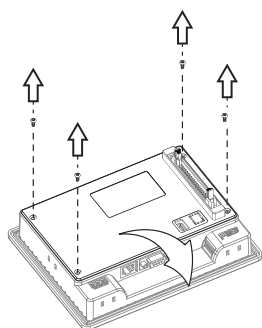


Loosen all the screws from the back cover  
and lift the back cover off. /  
請鬆開後蓋螺絲並將後蓋翻面 /  
请松开后盖螺丝并将后盖翻面

2.

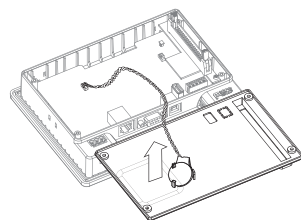


Remove the primary battery from inside of  
the back cover. /  
移除後蓋反面的固定電池座上的原電池 /  
移除后盖反面的固定电池座上的原电池

3.

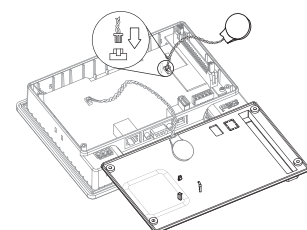


Plug in the JST PH connector of the  
replacement battery into the socket to the right. /  
將替代外接電池接頭插入右邊電池插座 /  
将替代外接电池接头插入右边电池插座

4.

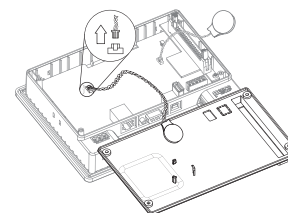


Unplug the JST PH connector the of primary  
battery on the left socket. /  
將主板左邊的原電池插座拔出 /  
将主板左边的原电池插座拔出

5.

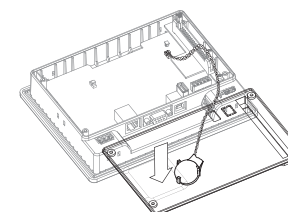


Place the battery in the correct direction  
and fix the replacement battery on the inside  
of the back cover, as shown. /  
將外接電池依圖示方向固定於後蓋背後位置 /  
将外接电池依图示方向固定于后盖背后位置

6.

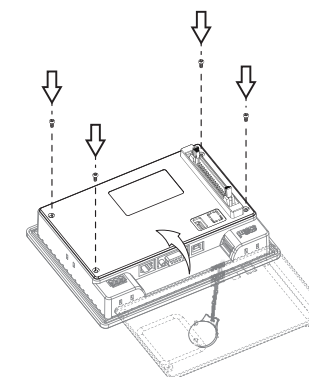


Replace the back rear and fasten  
the screws to fix. /  
蓋回後蓋並鎖回螺絲即完成 /  
盖回后盖并锁回螺丝即完成

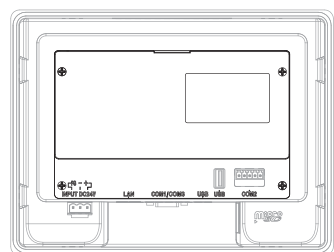

## Standard Rear case / 標準後殼 / 标准后壳

P1 / B1 / L1 / F1 / J1 / V2 / U2


1.

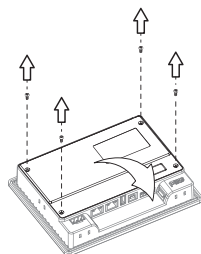

Loosen all the screws from the back cover and lift the back cover off. /

請鬆開後蓋螺絲並將後蓋翻面 /  
请松开后盖螺丝并将后盖翻面


2.

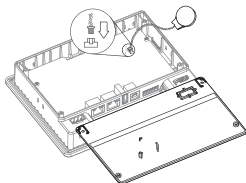

Plug in the JST PH connector of the replacement battery into the socket to the right. /

將替代外接電池接頭插入右邊電池插座 /  
将替代外接电池接头插入右边电池插座


3.

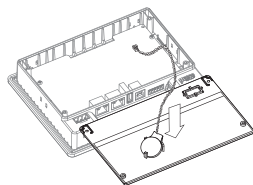

Place the battery in the correct direction and fix the replacement battery on the inside of the back cover, as shown. /

將外接電池依圖示方向固定於後蓋背後位置 / 將外接電池依圖示方向固定于后盖背后位置

4.

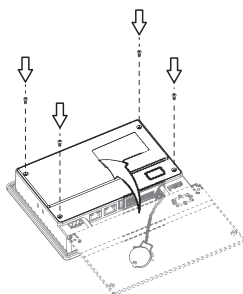

Replace the back rear and Fasten the screws to fix. /

蓋回後蓋並鎖回螺絲即完成 /  
盖回后盖并锁回螺丝即完成


## \*Notice / 注意事項 / 注意事项

### Setting / 設定 / 设定

If the RTC and battery memory data are corrupted after restart the product power, please reset the RTC and clear Recorded Data.

如果開啟電源後RTC及電源記憶資料為亂數時,請重新設定RTC及清除紀錄數據 /  
如果开启电源后RTC及电源记忆数据为随机数时,请重新设定RTC及清除纪录数据

English Version

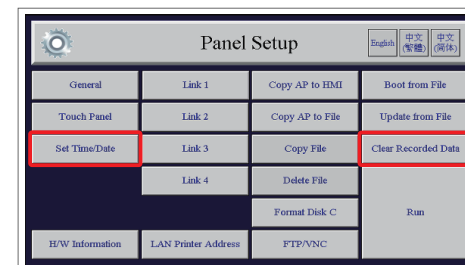

繁中



簡中



### CAUTION / 注意 / 注意

- "Clear Recorded Data" will clear all historical data in the HMI.
- 清除記錄數據會將所有歷史數據一併清除
- 清除记录数据会将所有历史数据一并清除